

# Instruction manual / Assembly instructions

Please keep!

## Low voltage current transformer - Window type ct -

### Series CTB



**MBS AG**

**Eisbachstraße 51**

**74429 Sulzbach-Laufen**

**Tel. +49 7976 9851-0**

**Fax. +49 7976 9851-90**

**info@mbs-ag.com • www.mbs-ag.com**

**Before installing, commissioning or operating the device, please read this manual completely and carefully.**

## 1. Safety instructions



### **Attention**

The following points should be noted:

- The applicable laws, standards and regulations.
- The state of the art at the time of installation.
- The rules of technology.
- The user manual.
- The fact that a manual can only be general and that these instructions must be followed.
- Before commissioning, carefully inspect the device for possible transport damage. In the event of mechanical damage, the device must not be put into operation.
- The devices described are intended for installation by qualified electricians and may only be installed in electrical service rooms or in enclosed enclosures. Any other use or failure to comply with this application notice will void the warranty.
- The devices may only be installed in dry indoor areas.
- Do not install on or near highly flammable materials.
- Operation with a rated current higher than specified on the rating plate can overheat the current transformer

## 2. Function Description

Current transformers of the CTB series are inductive current transformers. They are used in order to transform the primary measured value into a smaller current which fits with the connected measuring instruments.

Due to the applied measuring principle, these current transformers are suitable for use in AC networks only.

Current transformers of the CTB series are maintenance-free.

## 3. Warning notes



### **Attention**

Dangerous electrical voltage can cause electric shock and burns.

Make sure that the data on the type plate and in the "Technical Data" under point 5 correspond to the operating parameters of the system.

Switch off the system before starting installation work!



### **Attention**


In a non-loaded (open) secondary circuit of the current transformer high voltages are induced at the secondary terminals. The occurring voltage values represent a danger to persons as well as the reliability of the current transformer.

**An "open operation", i.e. operation of the current transformer without secondary wiring, is absolutely to be avoided.**

## 4. Installation


- Ensure a safe working environment during installation, maintenance and installation work. Disconnect the power supply of the primary conductor and secure it against unintentional restart.
- Install the current transformer on the primary conductor.
- To do this, put the primary conductor (copper rail or round conductor) through the window opening of the current transformer housing. The window of the CT is marked with "P1" or "P2".
- The device can be mounted either directly on the primary conductor or on a mounting plate. Use the fasteners included in the delivery. The direct attachment to the primary conductor is carried out by screwing the fastening screws contained in the accessories pack into the screw domes on the current transformer housing. Optionally you can use the Quick-Fix mounting (Order No. 55021). The mounting on mounting plate is done by means of the foot angle also included in the accessories.
- Current transformers of the types CTB 31.35 and CTB 41.35 can also be attached to a 35 mm DIN rail by means of a snap-on attachment (Order No. 55015) available as an accessory.
- Make the secondary connections. Note the marking "S1" and "S2" of the second

### 4.1. Measuring circuit

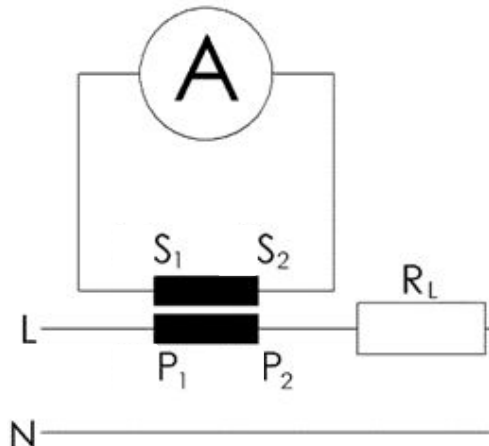

## 4.2. Installation instructions


### Actuation of secondary terminal clamps (CAGE CLAMP®)

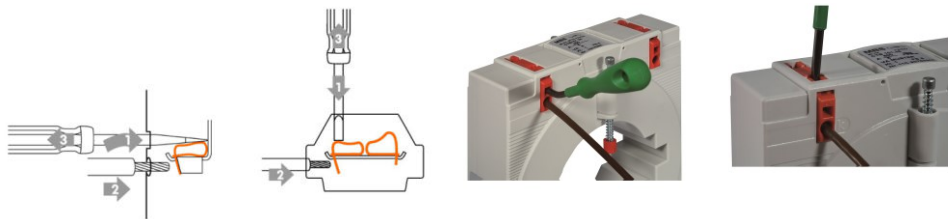

### Assembly of the fixing screws



### Mounting on copper rail or round conductor

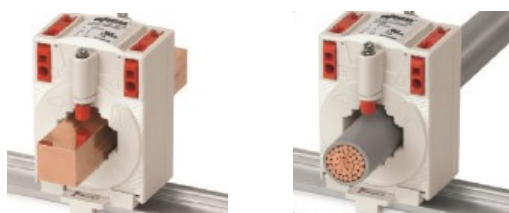


### Assembly with Quick-Fix



### Mounting on 35 mm DIN rail with snap-on mounting (only CTB 31.35 and CTB 41.35)



## Mounting on mounting plate

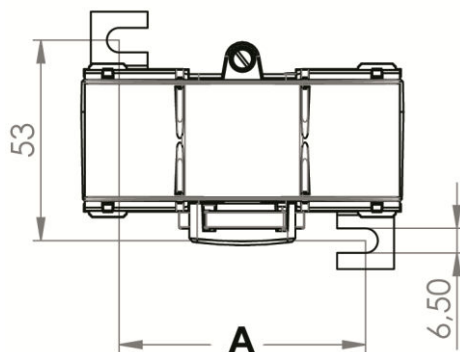

	CTB 31.35	CTB 41.35	CTB 51.35	CTB 61.35	CTB 81.35	CTB 101.35
Measure „A“ [mm]	40	40	65	65	95	95

## Mounted cover seal



## 5. Technical data (for details see rating plate)

### 5.1. General technical data

#### Input sizes

Rated primary current $I_{pr}$ :	see below 5.2.
Rated continuous thermal current $I_{cth}$ :	$1.2 \times I_{pr}$ ( $> 2000 \text{ A}$ : $1.0 \times I_{pr}$ )
Rated short-time thermal current $I_{th}$ :	$60 \times I_{pr} / 1 \text{ s}$ (max. $100 \text{ kA}$ )
Rated dynamic current $I_{dyn}$ :	$2.5 \times I_{th}$
Rated frequency $f_R$ :	50 ... 60 Hz

#### Output sizes

Rated secondary current $I_{sr}$ :	5A or 1A
Accuracy class (depending on type):	0.2S ... 3
Rated output $S_r$ (depending on type):	1.25 ... 15 VA
Instrument security factor FS:	FS5 resp. FS10

#### Operating conditions

Ambient temperature:	-5...+50 °C
Storage temperature:	-25 ... +70 °C
Relative humidity (no condensation):	5 ... 85 %
Altitude:	up to 1000 m

#### Insulation properties

Highest voltage for equipment $U_m$ (in accordance with IEC 61010-1 under the following conditions: - overvoltage category III - pollution degree 2 - heterogeneous electric field):	1.2/6/- kV
Surge resistance in accordance with DIN EN 61439-1: 2012-06:	12 kV (1.2/50 $\mu\text{s}$ )
Insulation class:	E

## **Security**

Degree of protection: IP20  
Body material : PC  
Housing classification of these types: UL94-V0

## **Connection**

Conductor feedthrough primary: see below 5.2.  
Secondary connection technology: CAGE CLAMP®  
Connection cross-section secondary: 2.5 – 4 mm<sup>2</sup> /  
AWG 14-12  
Stripping length: 9 – 10 mm / 0.37 in


## **In compliance with:**

IEC 61869-1  
IEC 61869-2  
IEC 61010-1  
UL certificate no.: 20100426-E336996

The latest edition of the mentioned documents applies, including all changes.




## 5.2. Technical data type-related

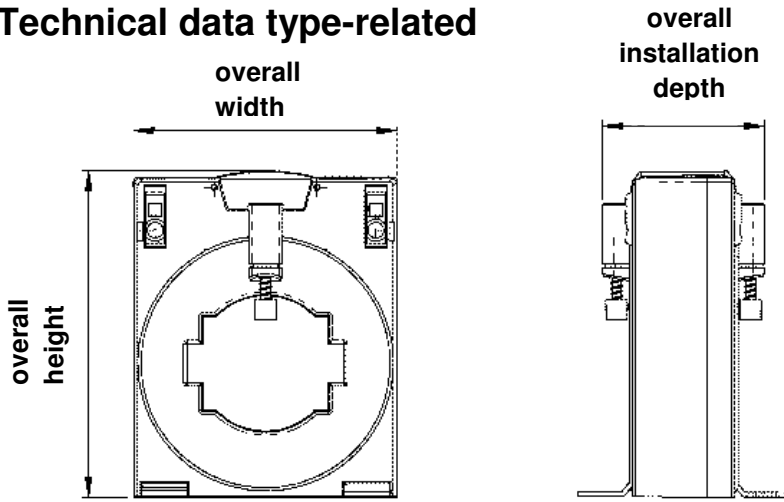

	CTB 31.35	CTB 41.35	CTB 51.35	CTB 61.35	CTB 81.35	CTB 101.35
Rated primary current [A]	50...750	75...1000	100...1250	200...1600	400...2000	400...2500
<b>Conductor feedthrough primary</b>						
busbar 1 [mm]	30 x 10	40 x 10	50 x 12	63 x 10	80 x 10	100 x 10
busbar 2 [mm]	25 x 12	30 x 15	40 x 30	50 x 30	60 x 30	80 x 30
busbar 3 [mm]	20 x 20	---	---	---	---	---
Round conductor [mm]	25.7	31.8	43.7	43.7	54.7	70
<b>Dimensions</b>						
width [mm]	60	70	85	95	120	130
height [mm]	80.5	91.15	105.25	114.86	134.66	147.49
overall depth [mm]	52	52	52	52	52	52


### 5.3. Identification of the rating plate

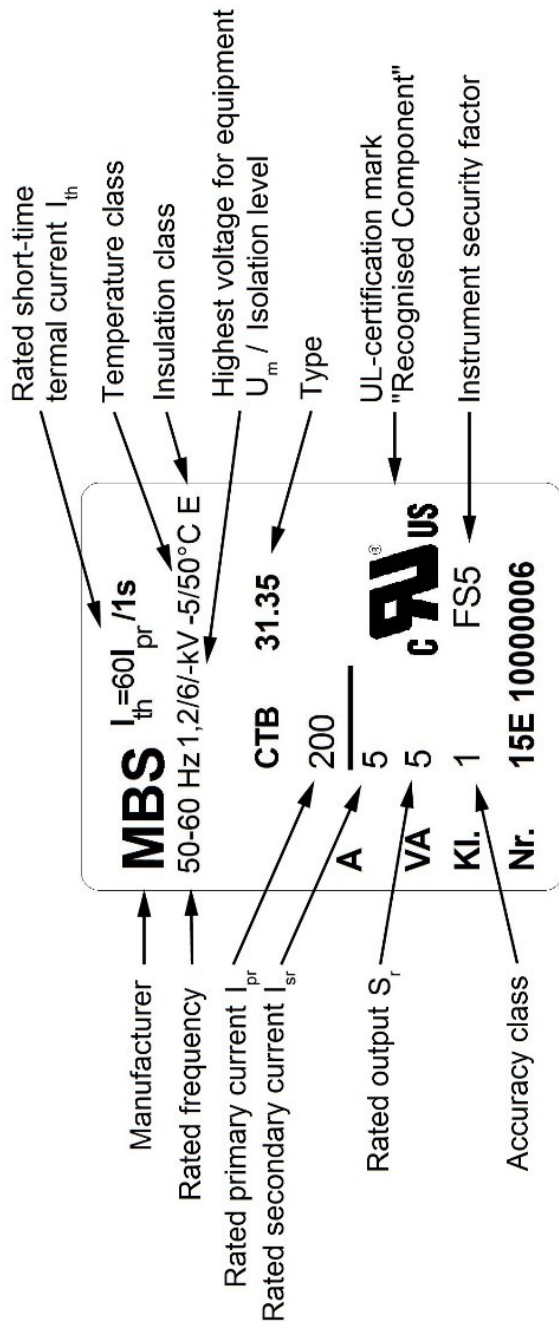

## 6. Additional equipment


Snap-on mounting for  
top hat rail 35 mm  
(Type CTB 31.35 and CTB 41.35)

**Order no. 55021**

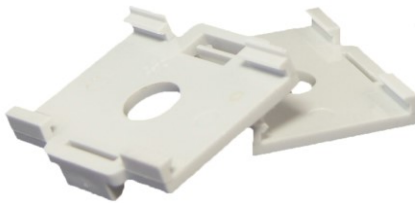

Quick-Fix

**Order no. 55021**

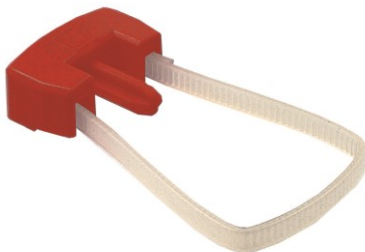

Cover seal

**Order no.:**

**59057** CTB 31.35  
CTB 41.35

**59058** CTB 51.35

**59059** CTB 61.35  
CTB 81.35  
CTB 101.35






This product was made in compliance with the applicable standards (IEC 61010, IEC 61869) and meets the requirements of the Low Voltage Directive 2014/35 / EU.



MBS AG hereby declares that its products use only components from qualified manufacturers whose specifications meet or exceed the requirements of the EU directive on the restriction of the use of certain hazardous substances.

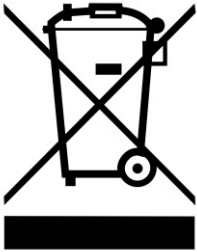

When the product reaches the end of its life, it must be recycled. Do not discard with household waste!

If necessary, ask a waste consultant!



# MBS AG

Eisbachstrasse 51 • 74429 Sulzbach-Laufen • Germany  
Telefon: +49 7976 9851-0 • Telefax: +49 7976 9851-90  
info@mbs-ag.com • www.mbs-ag.com